


VeriMaster

Software tools

Measurement
made easy

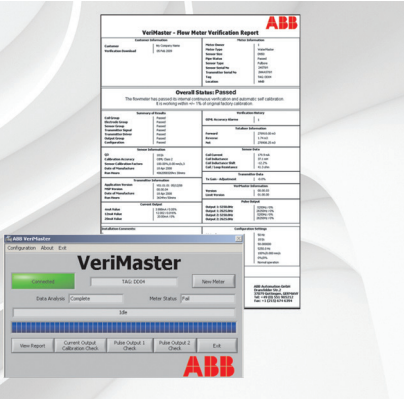

—
VeriMaster
software

Overview

VeriMaster is a PC software application that produces documented records (reports) of the self-checking diagnostics and validation routines built into an ABB WaterMaster flowmeter to provide in situ verification.

For more information

Further publications for the WaterMaster electromagnetic flowmeter are available for free download from:

www.abb.com/measurement

or by scanning this code:



Search for or click on

Data Sheet	DS/WM-EN
WaterMaster Electromagnetic flowmeter	
User Guide	IM/WM
WaterMaster Electromagnetic flowmeter	
Programming Guide	IM/WMP
WaterMaster Electromagnetic flowmeter	
User Guide Supplement – PROFIBUS RS485 Physical Layer (FEX100-DP)	IM/WMPBS-EN
WaterMaster Electromagnetic flowmeter	
User Guide Supplement – PROFIBUS FEX100-DP Parameter Tables	IM/WMPBST-EN
WaterMaster Electromagnetic flowmeter	

Contents

1	Introduction	2
1.1	Compatibility	2
1.2	Required Equipment and ABB Part Numbers	2
2	Installing VeriMaster	3
2.1	Software Installation	4
2.2	Run VeriMaster	12
2.3	Troubleshooting	13
3	VeriMaster Dialogs	14
3.1	Main Menu	14
3.2	Configuration	17
3.3	Communication Wizard	18
3.4	Customer Information	19
3.5	Current Output	20
3.6	Pulse Output	21
4	Using VeriMaster	22
4.1	Generating a Report	22
4.1.1	Viewing a Report	22
4.1.2	Saving a Report	24
4.1.3	Printing a New Report	25
4.1.4	Printing a Saved Report	25
4.2	Changing the Default Results Directory	26
4.3	Running the Communication Wizard	27
4.4	Checking the Current Output Calibration	28
4.5	Checking the Pulse Output Calibration	30
5	Reports	33
5.1	Summary of Results	33
5.2	Overall Result	36
5.3	Clear Alarm History	36
6	Acknowledgements	36

1 Introduction

VeriMaster is a PC software application that produces documented records (reports) of the self-checking diagnostics and validation routines built into an ABB WaterMaster flowmeter to provide in situ verification.

The software enables diagnostic and validation data on the transmitter to be downloaded and saved as an electronic file (in .jpg format) or printed as a certificate to provide a hard copy verification report that has either a passed or failed status.

Live flow measurement and internal volume totalization are unaffected by the VeriMaster test sequence or operation – flowmeter operation continues normally (only the current output and pulse outputs are affected if these are tested).

VeriMaster is supplied complete with Service Port Splitter software that enables communication between the transmitter and a PC (USB port) via an infrared adaptor – see Section 2.2, page 12.

1.1 Compatibility

The VeriMaster/Service Port Splitter software is compatible with the following:

- a PC running Windows XP (32 bit), Windows 7 (32 bit) or Windows 7 (64 bit)
- an ABB WaterMaster flowmeter running application firmware V01.01.01 or later

1.2 Required Equipment and ABB Part Numbers

The following equipment is required to use VeriMaster software:

- PC with USB port and printer
- ABB infrared adaptor
- resistor (100R resistor recommended, minimum 50R, maximum 750R), 0.05 % tolerance or better
- digital volt meter (DVM). 4¹/₂ digit, accuracy better than 0.05 % on voltage range or digital multimeter (DMM), accuracy better than 0.05 % on current range

Item	ABB Part Number
Verimaster package installer	WAJC2550
VeriMaster software*	WAJC2532
Service Port Splitter software (COM port communication)*	WAJC2510
ABB infrared adaptor model FZA100	WEBC2500

*These software applications / drivers are included in the installer package WAJC2550

Table 1.1 ABB Part Numbers for VeriMaster and Associated Items

2 Installing VeriMaster

This Section describes how to install VeriMaster onto a computer running Windows 7. The procedures are identical for 32 and 64 bit variants of Windows 7.

The software may also be installed onto a PC running Windows XP. Any differences are explained in the procedure.

The installation package (WAJC2550) installs the following software onto the PC.

- **ABB service port splitter (WAJC2510)**
Enables VeriMaster to communicate with WaterMaster. It splits one real com port into several virtual com ports.
- **Future Technology Devices International (FTDI) driver**
Provides a com port that is used to communicate with WaterMaster via the IR cable. It must be installed before the cable is plugged in.
- **National Instruments LabVIEW™ run-time engine**
Provides a platform for VeriMaster to run on.
- **VeriMaster (WAJC2532)**
ABB proprietary software that provides the functionality described in Section 1.

2.1 Software Installation


Note. Before installing VeriMaster, ensure the infrared adaptor USB cable is **not** connected to the PC.

1. Copy the VeriMaster installation file to the PC.
2. Double click the file to run it and extract the installation files.
3. If Windows 7 asks for permission to make changes, click 'Yes' to initiate prerequisites installation.
4. **Prerequisites installation.**
 - a. A prerequisites wizard dialog is displayed:



Click 'Next'.

- b. A list is displayed showing the prerequisites to be installed:

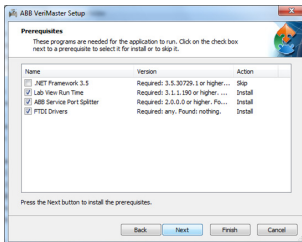

Click 'Next' to install the ticked items.


Note. Steps c to e are applicable only if:

VeriMaster is installed on a computer running Windows XP

and


that computer does not have the correct version of the Microsoft .NET Framework installed (.NET framework is selected in the prerequisites wizard list)

- c. A .NET Framework license agreement is displayed:

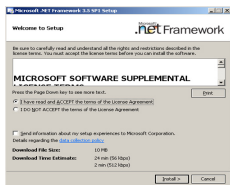

Click the radio button to accept the license agreement and click 'Install >'

- d. An installation progress dialog is displayed:

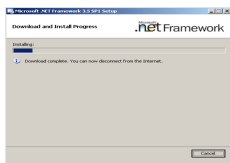


- e. When installation is complete, a confirmation dialog is displayed:



Click 'Exit'.

If a restart dialog is displayed, click 'No'.

- f. A progress dialog is displayed:

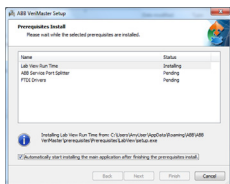

Allow installation to complete and click 'Finish' to initiate LabView installation.


5. **LabVIEW installation.**

- a. A LabVIEW installation dialog is displayed:




Click 'Next >>'.

- b. A 'Destination Directory' dialog is displayed:

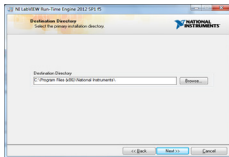


Click 'Next >>' to accept the default destination.

- c. A 'Features' dialog is displayed:

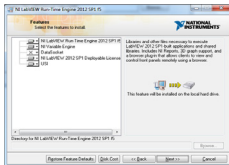


Click 'Next >>' to install the default files.

- d. A 'Product Notifications' dialog is displayed:

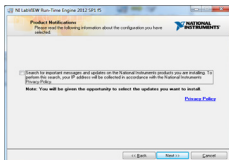


Untick the box and click 'Next >>'.

- e. A National Instruments license agreement is displayed:

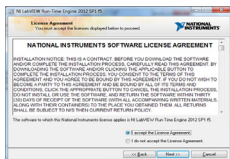


Click the radio button to accept the license agreement and click 'Next >>'.

- f. An installation summary dialog is displayed:

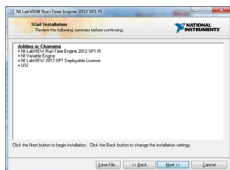

Click 'Next >>' to install LabVIEW.


- g. When installation has finished, an 'Installation Complete' dialog is displayed:

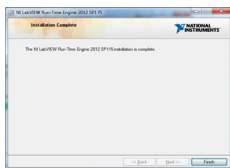

Click 'Finish' to initiate the ABB service port splitter installation.


6. ABB service port splitter installation.

- a. An 'ABB Service Port Splitter Setup' dialog is displayed.

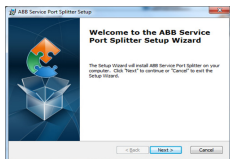


Click 'Next >'.

- b. A 'Select Installation Folder' dialog is displayed:

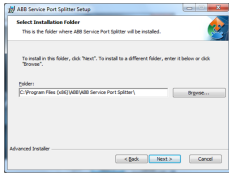


Click 'Next >' to accept the default destination.

- c. A 'Ready to Install' dialog is displayed:

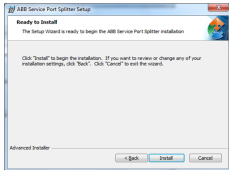


Click 'Install'.

- d. An installation progress dialog is displayed:

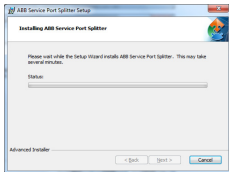

When installation is complete, click 'Next >'.


- e. An installation confirmation dialog is displayed:

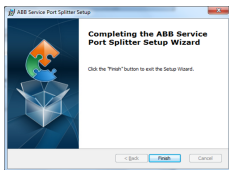

Click 'Finish' to initiate the FTDI drivers installation.

7. **FTDI drivers installation.**

- a. An 'ABB Service Port Splitter Setup' dialog is displayed.

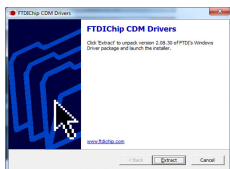


Click 'Extract'.

- b. When the installation files have been extracted, a 'Device Driver Installation Wizard' dialog is displayed:




Click 'Next'.

- c. An installation progress dialog is displayed:

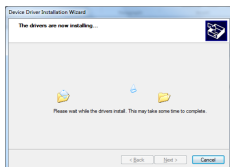

When installation is complete, click 'Next'.


- d. An installation confirmation dialog is displayed:

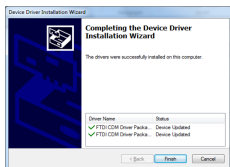

Click 'Finish' to initiate VeriMaster installation.


8. **VeriMaster installation.**

- a. An 'ABB VeriMaster Setup Wizard' dialog is displayed.

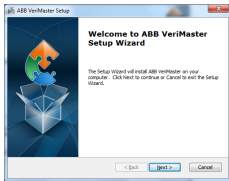

Click 'Next >'.


- b. A 'Customer Information' dialog is displayed:

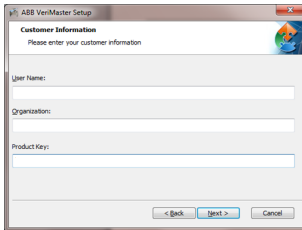

A unique product key can be found on the box containing the VeriMaster software DVD. Enter your details together with the product key in this dialog.


Click 'Next >'.

- c. A 'Select Installation Folder' dialog is displayed:

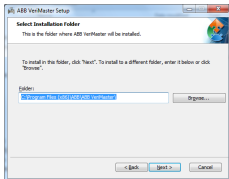


Click 'Next >' to accept the default destination.

- d. A 'Ready to Install' dialog is displayed:

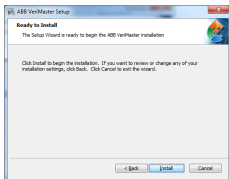


Click 'Install'.

- e. An installation progress dialog is displayed:

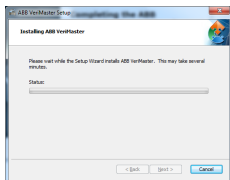


When installation is complete, click 'Next >'.

- f. An installation confirmation dialog is displayed:

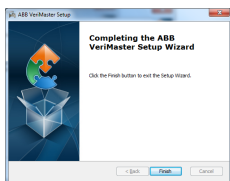

Click 'Finish'.

- g. A restart dialog is displayed:



Click 'Yes' to restart the PC and complete VeriMaster installation.

9. Connect the infrared adaptor to the WaterMaster transmitter and the PC and run VeriMaster – see Section 2.2, page 12.

2.2 Run VeriMaster

Note.

- Ensure the glass screen and the suction pads are clean and dry before attaching the Infrared Adaptor to the transmitter.
- Avoid siting the WaterMaster / Infrared Adaptor in direct sunlight as this can interfere with normal operation.

Referring to Fig. 2.1:

1. Carefully align the two infrared ports on the inside face of adaptor (A) with the two infrared sensor channels on the transmitter glass display.
2. Secure the Infrared Adaptor to the transmitter glass area using the suction pads.
3. Connect USB cable (B) to the USB port on the PC.



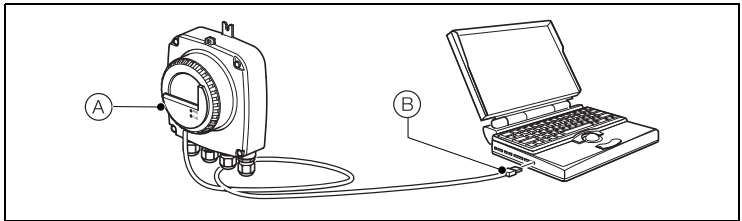


Fig. 2.1 Infrared Adaptor Installation

4. Wait for Windows notification that the driver for the cable has installed.
5. Double click the 'ABB VeriMaster' icon on the desktop. The 'ServicePortSplitter Setup' progress bar is displayed:



6. When setup is complete, the VeriMaster main menu is displayed:

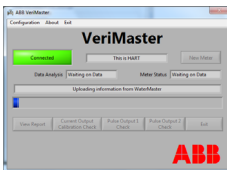

Installation is now complete.

2.3 Troubleshooting

If VeriMaster cannot communicate with the transmitter:

1. Check the infrared adaptor is correctly connected to the PC.
2. Check the infrared adaptor is attached firmly to the WaterMaster screen and that the infrared detectors are aligned precisely – see Section 2.2, page 12.
3. Check the transmitter is VeriMaster enabled.

3 VeriMaster Dialogs

3.1 Main Menu

The 'Main Menu' dialog is displayed once the software has been launched and has attempted to communicate with the transmitter.

All other VeriMaster dialogs are displayed or reached via the 'Main Menu' – see Fig. 3.1.

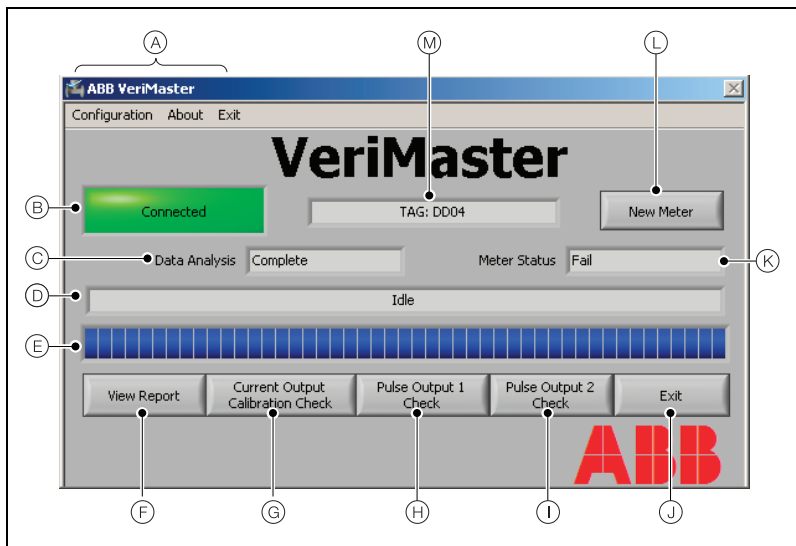


Fig. 3.1 Main Menu


Item	Description
(A)	<p>Menu bar – displayed once the software is available and is communicating with the transmitter:</p> <ul style="list-style-type: none"> ■ 'Configuration' – opens the 'Configuration' dialog (see Section 3.2, page 17). ■ 'About' – displays VeriMaster part number, software version and ABB contact details. ■ 'Exit' – exits VeriMaster and ends communication with the transmitter.
(B)	<p>Connection Status – displays one of:</p> <ul style="list-style-type: none"> ■ 'Connected' – when VeriMaster has established communication with the transmitter the button is green. ■ 'Not Connected' – if VeriMaster fails to communicate with a transmitter, or loses connection, the button is red and a report cannot be generated until connection is re-established.
(C)	<p>Data Analysis field – displays the status of the current data analysis:</p> <ul style="list-style-type: none"> ■ 'Complete' – analysis is complete for the current transmitter. ■ 'Waiting on Data' – displayed if data analysis is incomplete (a full report cannot be generated).
(D)	<p>Status field – shows the current upload status of VeriMaster software:</p> <ul style="list-style-type: none"> ■ 'Idle' – no software operations currently in progress. ■ 'Updating information from WaterMaster' – displayed while diagnostic and validation data is uploaded.
(E)	<p>Progress bar – a visual display of relative progress while the software is performing an operation.</p> <p>Note. While status field (D) reads 'Idle', the status bar is filled with a continuous blue bar .</p>
(F)	<p>'View Report' – generates a validation report.</p> <p>Clicking 'View Report' opens the 'Customer Information' dialog (used to add customer information to the report – see Section 3.4, page 19) before proceeding to the report.</p> <p>Prompts are also displayed in the following conditions:</p> <ul style="list-style-type: none"> ■ If the 'Current Output Calibration Check' and/or 'Pulse Output Check' (1 and 2) have not been completed, a continue/cancel prompt is displayed. ■ If the 'Customer Information' dialog is not completed, a continue/cancel prompt is displayed; this does not affect the 'Passed/Fail' status of a report – see Section 3.4, page 19.

Table 3.1 Main Menu Overview

Item	Description
Ⓒ	'Current Output Calibration Check' – performs a current output calibration check.
Ⓗ	'Pulse Output 1 Calibration Check' – performs a pulse output 1 calibration check.
Ⓘ	'Pulse Output 2 Calibration Check' – performs a pulse output 2 calibration check.
Ⓙ	'Exit' – exits VeriMaster and ends communication with the transmitter.
Ⓚ	<p>'Meter Status' – displays the status of the flowmeter:</p> <ul style="list-style-type: none"> ■ 'Pass' – the flowmeter has passed its internal continuous verification and is working within ± 1 % of original factory calibration. ■ 'Marginal' – the flowmeter has detected internal measurement changes that may affect the measurement accuracy – see Section 5.1, page 33. ■ 'Fail' – the flowmeter has failed its internal continuous verification (a statement is displayed on the report beneath the 'Overall Meter: Fail' notification).
Ⓛ	<p>'New Meter' – clears all information relative to the current transmitter from (PC) memory to allow connection of a new flowmeter.</p> <p>Note. This button is also a reset – if connection with the transmitter is lost (status is 'Not Connected'), the status changes to 'Connect'.</p>
Ⓜ	<p>Meter ID Field – the transmitter is polled continuously to verify continuous communication. If connected, this field displays the 'Sensor Tag' or, if no tag is available, the 'SAP/ERP No' serial number is shown.</p> <p>Note. The 'Sensor Tag' can be edited on the WaterMaster – refer to IM/WMP for details.</p>

Table 3.1 Main Menu Overview (Continued)

3.2 Configuration

The 'Configuration' dialog (see Fig. 3.2) is used to specify or select a default directory for saved reports and to run the 'Communication Wizard'.

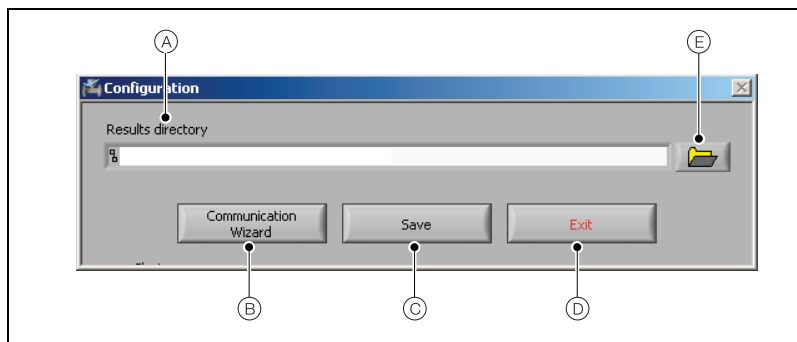


Fig. 3.2 'Configuration' Dialog


Item	Description
(A)	'Results Directory' – the default directory path that reports are saved to – see Section 4.2, page 26. The default path is the current user's desktop. A different path can be entered manually or selected via the folder icon (E).
(B)	'Communication Wizard' – runs a communication wizard to detect and automatically setup which COM port on the PC is used for communication (via HART protocol) – see Section 4.3, page 27.
(C)	'Save' – saves any changes to the 'Results Directory' path and establishes the new path as the default.
(D)	'Exit' – exits the 'Results Directory' and returns to the 'Main Menu'.
(E)	 Icon – opens the Windows 'Open' dialog, allowing a directory to be specified for saved reports – see Section 4.2, page 26:

Table 3.2 'Configuration' Dialog Overview

3.3 Communication Wizard

The 'Communication Wizard' dialog (see Fig. 3.3) is displayed automatically while the software is establishing a connection with the transmitter – see Section 4.3, page 27.

The 'Communication Wizard' is launched when VeriMaster is started up or, subsequently, by selecting 'Configuration' from the 'Main Menu'.

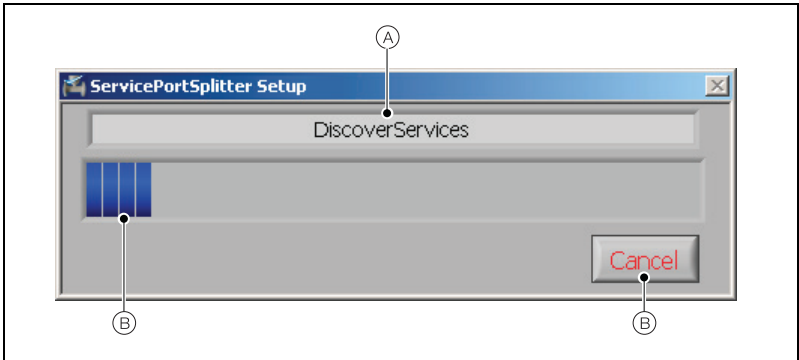


Fig. 3.3 'Communication Wizard' Dialog

Item	Description
(A)	Status field – the status of the operation during the stages required to establish communication. When communication has been established successfully, the 'Communication Wizard' dialog closes automatically, the 'Configuration' dialog is displayed and the 'Save' button is highlighted by a green box – see Section 4.3, page 27.
(B)	Status bar – provides a visual indication of the relative progress of the current operation.
(C)	'Cancel' – cancels the current operation and returns to the 'Configuration' dialog.

Table 3.3 'Communication Wizard' Dialog Overview

3.4 Customer Information

The 'Customer Information' dialog (see Fig. 3.4) enables customer-specific information to be added to the generated report. This dialog is displayed by clicking 'View Report' on the 'Main Menu'.

Note. Information added to 'Customer Information' fields is retained in memory until 'New Meter' is selected at the 'Main Menu'. The comments are then discarded and new comments must be entered if required.

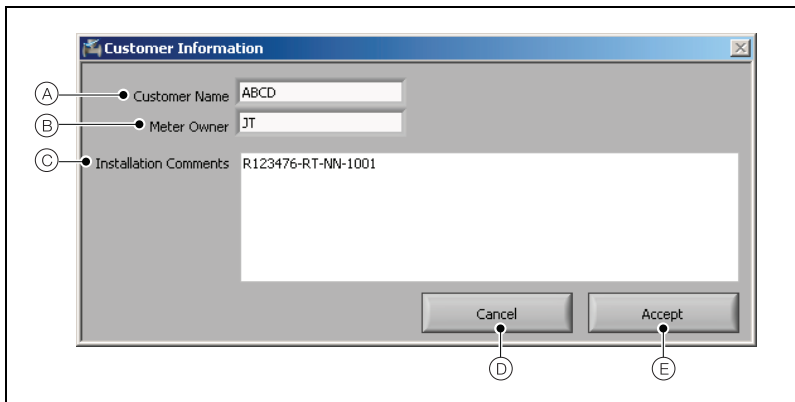


Fig. 3.4 'Customer Information' Dialog

Item	Description
(A)	'Customer Name' – a free-text field used to enter a name (25 characters max.).
(B)	'Meter Owner' – a free-text field used to enter the ID of the owner.
(C)	'Installation Comments' – a free-text field used to enter any installation comments.
(D)	'Cancel' – cancels the 'View Report' operation and returns to the 'Main Menu'.
(E)	'Accept' – verifies that text in the 'Customer Name' and 'Installation Comments' fields does not exceed character limits and generates the report – see Section 4.1, page 22. If the 'Customer Name' and 'Installation Comments' fields have too much or no text, a prompt is displayed. If character limits are exceeded, only the number of characters permitted are displayed on the report.

Table 3.4 'Customer Information' Dialog Overview

3.5 Current Output

The 'Current Output' dialog (see Fig. 3.5) is used to test and verify the current output generated by the transmitter – see Section 4.4, page 28.

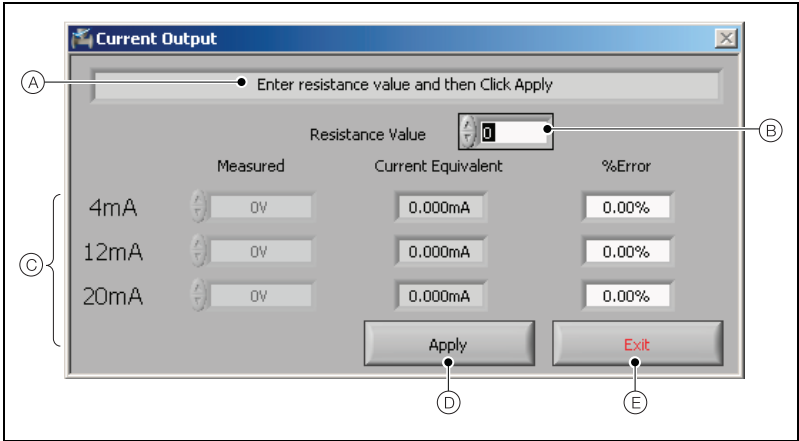


Fig. 3.5 'Current Output' Dialog

Item	Description
(A)	Status bar – a context-sensitive read-only guide to the required step at each stage of the test.
(B)	'Resistance Value' – a free-text field used to enter the resistance value for calculating the current equivalent (100R recommended – min. 50R, max. 750R).
(C)	'4mA/12mA/20mA' text fields – used to enter the measured voltage and display current equivalents and error(s) against expected values for each current: <ul style="list-style-type: none"> ■ 'Measured' (Voltage) – used to enter the voltage reading. ■ 'Current Equivalent' – populated automatically when 'Apply' is clicked after entering the measured voltage. ■ '%Error' – populated automatically – displays the % difference between the calculated and expected current.
(D)	'Apply' – saves values entered at the 'Resistance Value' and 'Measured' (Voltage) fields.
(E)	'Exit' – exits the dialog and returns to the 'Main Menu'.

Table 3.5 'Current Output' Dialog Overview

3.6 Pulse Output

The 'Pulse Output' dialog (see Fig. 3.6) is used to test and verify the pulse frequency generated by the transmitter – see Section 4.5, page 30.

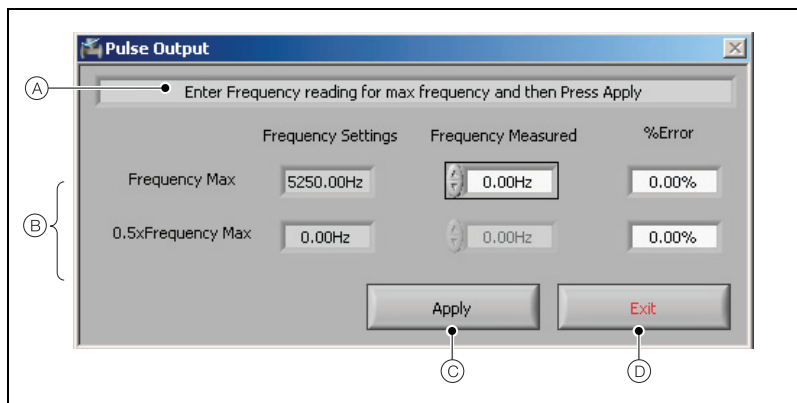


Fig. 3.6 'Pulse Output' Dialog

Item	Description
(A)	Status bar – a context-sensitive read-only guide to the required step at each stage of the test.
(B)	'Frequency Max/0.5xFrequency Max' text fields – used to display frequency settings, enter the measured frequency and display any error(s) against expected values for each frequency: <ul style="list-style-type: none"> ■ 'Frequency Settings' – displays the transmitter's setting for the pulse output – populated when 'Apply' is clicked after entering the frequency reading. ■ 'Frequency Measured' – used to enter the pulse frequency reading. ■ '%Error' – populated automatically, the % difference between the calculated and expected frequency.
(C)	'Apply' – applies values entered in the 'Frequency Measured' fields.
(D)	'Exit' – exits the dialog and returns to the 'Main Menu'.

Table 3.6 'Pulse Output' Dialog Overview

4 Using VeriMaster

4.1 Generating a Report


Reports can be saved and/or printed to produce a 'snapshot' of the transmitter's current diagnostic/validation information.

4.1.1 Viewing a Report

To generate and view a report:


1. At the 'Main Menu', click 'View Report'.

Note. If the current and pulse output checks have not been completed, a prompt is displayed.



Click 'Yes' to proceed or 'No' to return to the 'Main Menu'.

The 'Customer Information' dialog is displayed with the fields empty:

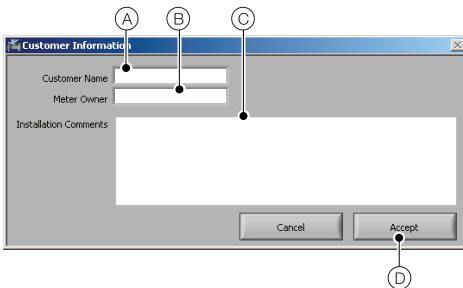


2. In the 'Customer Name' field (A) type a customer name.
3. In the 'Meter Owner' field (B) type an identification for the owner of the transmitter.
4. In the 'Installation Comments' field (C) type any comments required.


Note. If the fields in steps 2 and / or 4 are populated with too many characters, a prompt is displayed to proceed or return to the 'Customer Information' dialog to edit the field(s).

If the report is generated and fields contain too many characters, the information on the report is truncated to the maximum characters permitted per field.

5. Click 'Accept' .

A formatted report is generated:

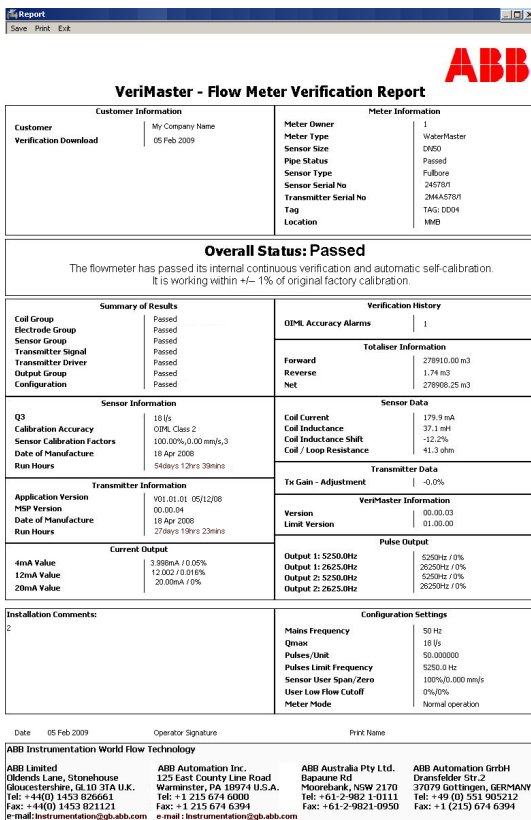



VeriMaster - Flow Meter Verification Report

Customer Information		Meter Information	
Customer	My Company Name	Meter Owner	1
Verification Download	05 Feb 2009	Meter Type	WaterMaster
		Sensor Size	DMS0
		Pipe Status	Passed
		Sensor Type	Fulbore
		Sensor Serial No	2457691
		Transmitter Serial No	284453781
		Tag	TAG: 0004
		Location	MMB

Overall Status: Passed

The flowmeter has passed its internal continuous verification and automatic self-calibration.
It is working within +/- 1% of original factory calibration.

Summary of Results		Verification History	
Coil Group	Passed	OIML Accuracy Alarms	1
Electrode Group	Passed	Totaliser Information Forward 278910.00 m3 Reverse 1.74 m3 Net 278908.25 m3	
Sensor Group	Passed		
Transmitter Signal	Passed		
Transmitter Driver	Passed		
Output Group	Passed		
Configuration	Passed		

Sensor Information		Sensor Data	
Q3	18 l/s	Coil Current	179.9 mA
Calibration Accuracy	OIML Class 2	Coil Inductance	37.1 mH
Sensor Calibration Factors	100.00%,0.00 mm/s,3	Coil Inductance Shift	-12.2%
Date of Manufacture	18 Apr 2008	Coil / Loop Resistance	41.3 ohm
Run Hours	54days 12hrs 33mins	Transmitter Data Tx Gain - Adjustment -0.0%	

Transmitter Information		VeriMaster Information	
Application Version	V01.01.01 05/12/08	Version	00.00.03
MSB Version	00.00.04	Limit Version	01.00.00
Date of Manufacture	18 Apr 2008		
Run Hours	27days 19hrs 23mins		

Current Output		Pulse Output	
4mA Value	3.998mA / 0.05%	Output 1: 5250.0Hz	5250Hz / 0%
12mA Value	12.002 / 0.016%	Output 1: 2625.0Hz	2625Hz / 0%
20mA Value	20.00mA / 0%	Output 2: 5250.0Hz	5250Hz / 0%
		Output 2: 2625.0Hz	2625Hz / 0%

Installation Comments:		Configuration Settings	
2		Mains Frequency	50 Hz
		Qmax	18 l/s
		Pulses/Unit	50.000000
		Pulses Limit Frequency	5250.0 Hz
		Sensor User Span/Zero	100%/0.000 mm/s
		User Low Flow Cutoff	0%/0%
		Meter Mode	Normal operation

Date 05 Feb 2009 Operator Signature Print Name

ABB Instrumentation World Flow Technology			
ABB Limited Oldens Lane, Stonehouse Gloucestershire, GL10 3TA U.K. Tel: +44(0) 1453 826661 Fax: +44(0) 1453 821121 e-mail: instrumentation@gb.abb.com	ABB Automation Inc. 125 East County Line Road Warrminster, PA 19374 U.S.A. Tel: +1 215 674 6000 Fax: +1 215 674 6394 e-mail: Instrumentation@gb.abb.com	ABB Australia Pty Ltd. Bapstone Rd Moorebank, NSW 2170 Tel: +61-2-982 1-0111 Fax: +61-2-9821-0950	ABB Automation GmbH Dransfelder Str.2 37079 Gottingen, GERMANY Tel: +49 (0) 551 905212 Fax: +1 (215) 674 6394


4.1.2 Saving a Report

Note. Report details are specific to the flowmeter data uploaded during the current session and are time and date stamped. Report contents are unique at each save and cannot be edited.

To save a report:

1. View the report – see Section 4.1.1, page 22.
2. At the 'Report' menu, click 'Save'.

The 'Enter Report Title' dialog is displayed with the default result directory (A) open:

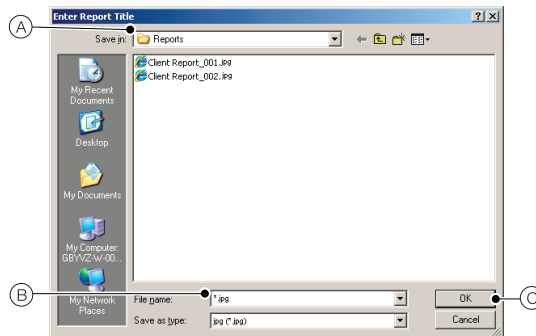


3. In the 'File Name' field, type a name for the file (B) and click 'OK' (C).

The report is saved to the directory as a .jpg file, the 'Enter Report Title' dialog is closed and the 'Report' dialog is displayed.

4. To close the 'Report' dialog, click 'Exit'.

A prompt is displayed asking if the alarm history should be cleared:



5. Click 'Yes' to clear (or 'No' to retain) the alarm history and return to the 'Main Menu'.

Note. The 'Alarm History' is used by VeriMaster to determine the marginal status. If a fault had occurred since VeriMaster was last run, but is now cleared, it indicates a marginal status. Clearing the 'Alarm History' clears the marginal status for future verification reports.


4.1.3 Printing a New Report

Note. Reports can be printed as PDF files if the Adobe PDF Writer driver is available and selected.

To print a new report:

1. Generate the report – see Section 4.1.1, page 22.
2. At the 'Report' menu, click 'Print'.

The 'Select Printer' dialog is displayed:

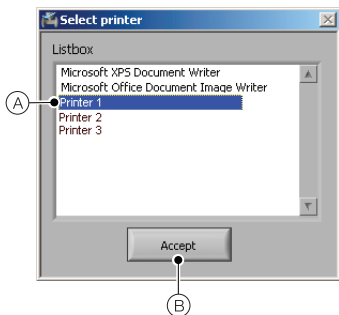

3. Select the printer required (A).
4. Click 'Accept' (B) to print the report.

4.1.4 Printing a Saved Report

To print a saved report:

1. From the default directory location, select the report to be printed – see Section 4.2, page 26.
2. Open the report using a .jpg file viewer.
3. Use the local application's print command to print the report.

4.2 Changing the Default Results Directory

When VeriMaster is installed, the default results directory is set to the user's desktop.

The directory can be changed by specifying a different path in the 'Results Directory' field.

To change the default results directory path:

1. At the 'Main Menu', select 'Configuration'.

The 'Configuration' dialog is displayed.



2. The existing default directory path is displayed in 'Results Directory' field (A).


3. Click the folder icon (B).

The (Windows) 'Open' dialog is displayed.

4. At the (Windows) 'Open' dialog, navigate to and select the required folder.

5. Click 'Current Folder'.

The 'Configuration' dialog is displayed and the 'Save' button (C) is highlighted green.

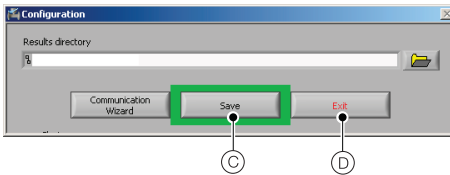

6. To save the default result directory, click 'Save' (C).

The new path is retained as the new default directory location for saved reports.

Note. To discard the new default directory, click 'Exit' (D) without saving. The new settings are discarded and the 'Main Menu' is displayed.

7. Click 'Exit' (D) to exit the dialog.

The 'Main Menu' is displayed.

4.3 Running the Communication Wizard

Note. The 'Communication Wizard' runs automatically when VeriMaster is first launched. If connection to the transmitter is lost subsequently, it can be re-established by re-running the wizard manually.

To run the 'Communication Wizard' manually:


1. At the 'Main Menu', select 'Configuration'.

The 'Configuration' dialog is displayed:



2. At the 'Configuration' dialog, click 'Communication Wizard' (A).


The 'ServicePortSplitter Setup' dialog is displayed while VeriMaster communicates with the infrared adaptor and transmitter.

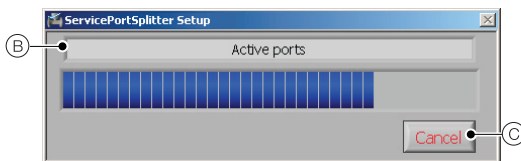

The connection progress is displayed in the status field (B).

Note. The wizard can be stopped at any time by clicking 'Cancel' (C).

3. If the new connection details are established successfully, the 'Configuration' dialog is displayed and the 'Save' button (D) is highlighted by a green box.

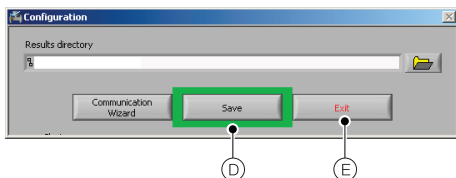

4. Click 'Save' (D) to save the new communication details.

Note. To discard the new communication details, click 'Exit' (E) without saving. The new settings are discarded and the 'Main Menu' is displayed.

5. Click 'Exit' (E) to return to the 'Main Menu'.

4.4 Checking the Current Output Calibration

Caution. This test must only be performed by suitably qualified instrumentation personnel.

Note.

- VeriMaster must show a status of 'Connected' to enable the current output to be verified.
- For analog output measurement:
 - resistor (100R resistor recommended, minimum 50R, maximum 750R), 0.05 % tolerance or better
 - digital volt meter (DVM), 4^{1/2} digit, accuracy better than 0.05 % on voltage range or digital multimeter (DMM), accuracy better than 0.05 % on current range

To check the current output calibration:

1. Refer to IM/WM to access the transmitter's current outputs.
2. Referring to Fig. 4.1:
 - a. Disconnect the customer's current output wiring.
 - b. Connect a precision resistor (tolerance better than 0.05 %) (A) across current output terminals 31 (IC+) and 32 (IC-).

Recommended value 100R (minimum 50R, maximum 750R).

Note. The resistor can be connected in series with the customer's receiving equipment, providing the total loop resistance does not exceed 750R.

- c. Measure the voltage (B) across the resistor (refer to page page 2 for minimum meter specification).


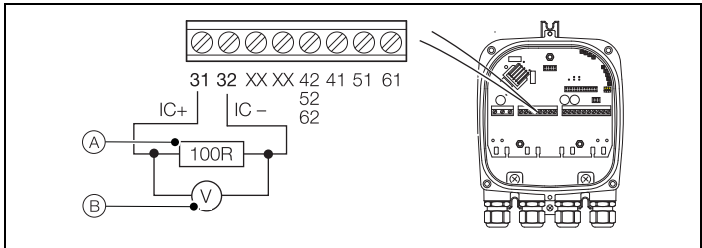


Fig. 4.1 Current Output Calibration Check

- At the 'Main Menu', click 'Current Output Calibration Check'.
The 'Current Output' dialog is displayed.

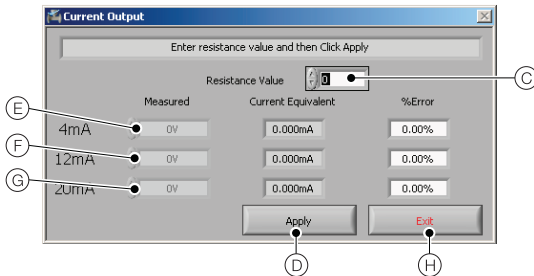

- In the 'Resistance Value' field (C), type the value of resistor (A) (from Fig. 4.1, page 28).
- Click 'Apply' (D).
The '4mA Measured' field (E) is enabled.
- In the '4mA Measured' field (E), type the voltage (B) measured at step 2c.
- Click 'Apply' (D).
The '4mA Current Equivalent' field displays a mA current equivalent and the '%Error' field displays any difference between the calculated current and the expected value.
- In the '12mA Measured' field (F), type the voltage (B) measured at step 2c.
The '12mA Measured' field is enabled.
- Click 'Apply' (D).
The '12mA Current Equivalent' field displays a mA current equivalent and the '%Error' field displays the status of the reading.
- In the '20mA Measured' field (G), type the voltage (B) measured at step 2c.
The '20mA Measured' field is enabled.
- Click 'Apply' (D).
The '20mA Current Equivalent' field displays a mA current equivalent and the '%Error' field displays the status of the reading.
- Click 'Exit' (H).
The readings are saved and the 'Main Menu' is displayed.

Note. If the current output calibration is exited before it is completed, a prompt is displayed to confirm exit or continue with the calibration.

4.5 Checking the Pulse Output Calibration

Caution. This test should only be carried out by suitably qualified instrumentation personnel.

Note.

- VeriMaster must show a status of 'Connected' to enable the pulse outputs to be checked.
- The pulse output operates only if an external circuit is connected (the contacts are open collector). If an external circuit is connected, connect the frequency counter (built into a DMM or similar) across the open collector output terminals on the transmitter.
If the frequency meter does not have this capability, use one of the following two options:
 - leave the plant load connected to the WaterMaster, as it will have a pull-up to some voltage
OR
 - using a voltage source and a resistor (250 R to 2K2) provide a pull-up for the open collector output to drive.
- Depending on the capability of the external frequency counter used, measurement of low frequencies may not be accurate enough. If such equipment is used, it is recommended that the WaterMaster 'Pulse Limit Frequency' is increased to at least 1000 Hz to enable an accurate result to be obtained from the external counter.

To check the pulse output 1 calibration:

1. Refer to IM/WM to access the transmitter pulse outputs.
2. Referring to Fig. 4.2 – connect a frequency counter across pulse output 1 (A) and note the frequency measured.


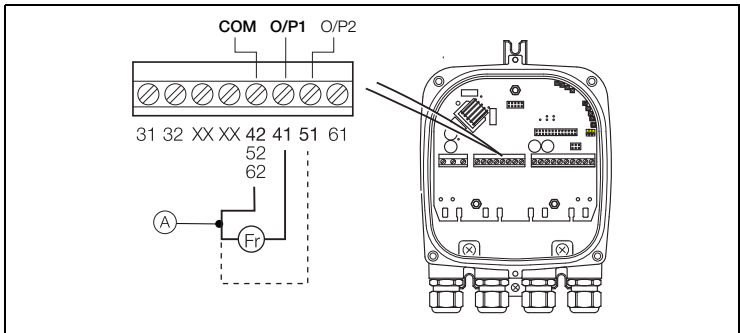


Fig. 4.2 Connecting a Frequency Counter to Pulse Output 1

- At the 'Main Menu', click 'Pulse Output 1 Check'.

The 'Pulse Output' dialog is displayed.

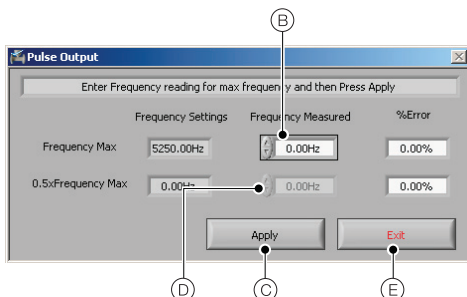

- In the 'Frequency Measured' field (B) (associated with 'Frequency Max'), type the measured frequency (A) (from step 3) for pulse output 1.
- Click 'Apply' (C). The '%Error' field displays any difference between the pulse output and the expected value.
- In the 'Frequency Measured' field (D) (associated with '0.5xFrequency Max'), type the measured frequency (A) (from step 3) for pulse output 1.
- Click 'Apply' (C). The '%Error' field displays any difference between the pulse output and the expected value.
- Click 'Exit' (E).

The readings are saved and the 'Main Menu' is displayed.

Note. If the pulse output check is exited before it is completed, a prompt is displayed to confirm exit or continue with the calibration.

To check the pulse output 2 calibration, proceed to step 9.

- Referring to Fig. 4.3 – connect a frequency counter across pulse output 2 (F) and note the frequency measured.


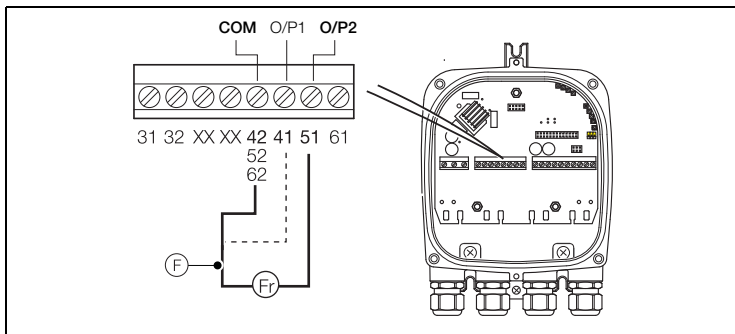


Fig. 4.3 Connecting a Frequency Counter to Pulse Output 2

- At the 'Main Menu', click 'Pulse Output 2 Check'.
The 'Pulse Output' dialog is displayed.

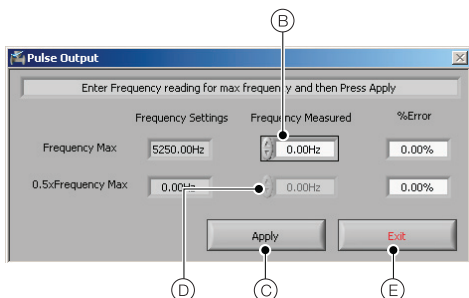

- In the 'Frequency Measured' field (B) (associated with 'Frequency Max'), type the measured frequency (F) (from step 11) for pulse output 2.
- Click 'Apply' (C). The '%Error' field displays any difference between the pulse output and the expected value.
- In the 'Frequency Measured' field (D) (associated with '0.5xFrequency Max'), type the measured frequency (F) (from step 11) for pulse output 2.
- Click 'Apply' (C). The '%Error' field displays any difference between the pulse output and the expected value.
- Click 'Exit' (E).
The readings are saved and the 'Main Menu' is displayed.

Note. If the pulse output check is exited before it is completed, a prompt is displayed to confirm exit or continue with the calibration.

5 Reports

5.1 Summary of Results

The 'Summary of Results' area shows the status of the device at the last configuration upload. Each group within the summary contains fail and marginal alarm conditions.

If the status for a condition is set to 'Fail' or 'Warning' and there is more than one condition in the group that affects the status, only the first condition is reported. To indicate if more than one condition affects the status of a group, a '+' is appended to the text in the report (for example, *Fail – Coil Open Circuit +*).

To produce a summary, each of the alarms in each alarm group is checked and, if a 'Fail' is not detected, the alarm history is checked. If a previous occurrence is detected in the history log the occurrence is indicated as a 'Warning' on the summary. If an item fails, it is indicated as a 'Fail' on the summary.

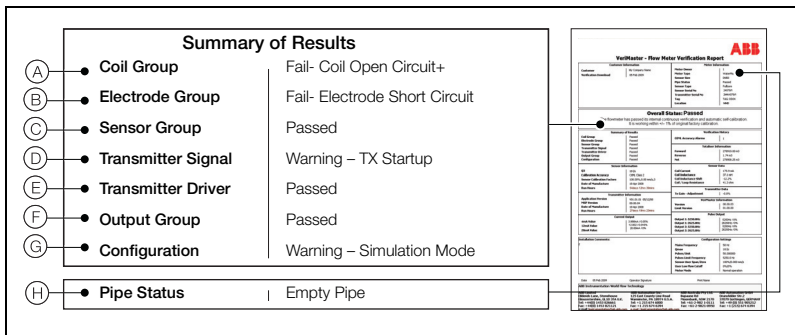


Fig. 5.1 Summary of Results

Note. NAMUR codes are shown in Table 4.1 in brackets next to applicable alarms. Refer to IM/WMP for code details and diagnostic text displayed at the WaterMaster transmitter.

Group	Fail with Alarm Message	Marginal Warning
(A)	Sensor Accuracy (VeriMaster defined) Coil Open Circuit (F238.025) Coil Short Circuit (F236.026) Loop Resistance (F234.027)	–
(B)	Electrode Open Circuit (S147.021) Electrode Short Circuit (S146.022) Electrode Voltage (S105.030) Electrode Voltage (VeriMaster defined)	–
(C)	Sensor Comms (M090.013) Installation (F247.024) Installation – Mixed System (F248.035) Installation – No Sensor (F252.016) Sensor Not Calibrated (S110.034) Installation – Bonding? (F230.029)	–
(D)	TX Accuracy (VeriMaster defined) TX Hardware (refer to Table 5.2 for conditions that generate this alarm)	TX Startup (S148.032)
(E)	Coil Current Tolerance (VeriMaster defined)	–
(F)	Current Output (VeriMaster defined) Pulse Output (VeriMaster defined)	–
(G)	–	Totaliser Incorrect Resolution/Units (M080.011) Simulation Mode (refer to Table 5.3 for conditions that generate this alarm) HART Address Non Zero (_044.014)
(H)	–	Empty Pipe (S150.018)

Table 5.1 Summary of Results – Fail and Marginal Warnings

NAMUR Code	Diagnostic Message at WaterMaster
C186.010	Tx. simulator/calibrator mode.
F220.017	Tx. measurement suspended. Contact service.
F232.028	Transmitter hardware fault. Contact service.
F250.015	Tx. memory fault detected. Contact service.
F253.036	Tx. code memory fault. Contact service.
F254.037	Tx. data memory fault. Contact service.
M094.033	Current output hardware fault. Contact service.

Table 5.2 Diagnostics that Generate the VeriMaster 'TX Hardware' Alarm

NAMUR Code	Diagnostic Message at WaterMaster
C168.001	Logic simulation selected on O/P1.
C174.002	Pulse simulation selected on O/P1.
C164.003	Logic simulation selected on O/P2.
C172.004	Pulse simulation selected on O/P2.
C160.005	Logic simulation selected on O/P3.
C182.009	Simulation mode on.
C158.038	HART frequency simulation active.
C190.039	Alarm simulation active.
C178.000	Simulated/fixed current output. HART address >0? Simulation mode?

Table 5.3 Diagnostics that Generate the VeriMaster 'Simulation Mode' Alarm

5.2 Overall Result

The overall result calculated by VeriMaster is one of the following types:

- 'Pass' – the flowmeter has passed its internal continuous verification and is working within ± 1 % of original factory calibration (the alarm status and alarm history do not contain any alarms and the output checks have been made and are within acceptable limits).
- 'Marginal' – the flowmeter has detected internal measurement changes that may affect the measurement accuracy. The current status does not contain any alarms but the alarm history does – see Section 5.1, page 33.

Note. The alarm history must be cleared before a 'Pass' status can be achieved – see Section 5.3 below.

- 'Fail' – the flowmeter has failed its internal continuous verification because:
 - at least one of the items in the 'Summary of Results' has failed
 - one or both of the output checks have unacceptable error levels
 - calibration checks have not been made

5.3 Clear Alarm History

If the result of the test has been saved or printed, the alarm history can be cleared when the Report window is exited. The prompt: 'Do you wish to clear the Alarm History?' is displayed when 'Exit' is selected, enabling the alarm history to be retained or discarded.

6 Acknowledgements

LabVIEW, National Instruments and NI are trademarks of National Instruments

Sales



Service



Software



ABB Limited**Measurement & Analytics**

Oldends Lane, Stonehouse

Gloucestershire

GL10 3TA

UK

Tel: +44 (0)1453 826661

Fax: +44 (0)1453 829671

Email: instrumentation@gb.abb.com

ABB Inc.**Measurement & Analytics**

125 E. County Line Road

Warminster

PA 18974

USA

Tel: +1 215 674 6000

Fax: +1 215 674 7183

ABB Engineering (Shanghai) Ltd.**Measurement & Analytics**

No. 4528, Kangxin Highway

Pudong New District

201319, Shanghai

P.R. China

Tel: +86 (0) 21 6105 6666

Fax: +86 (0) 21 6105 6677

abb.com/measurement

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

© ABB 2018

